10 Performance Sail Kit Assembly Instructions


Sail Kit Part #99108 Instruction Book Part #14025 Rev #SR.01.09.06





PARTS LIST


(Specifications and contents subject to change without notice)


Description		Part #
A.	Die Tool	#18132
B.	Dowel	#24065
C.	Daggerboard Housing Cap Assembly	#26024
D.	Mast Support Tube	#18172
E.	Mast Support Collar	
F.	Seat Clamp Assembly	
G.	Ratchet Block	#17099
Н.	Lower Mast Half (w. gooseneck ring)	
I.	Upper Mast Half	
J.	Performance Sail w. Bag (w. batten)	#17407
K.	Boom	
L.	Line Kit	#23061
	Outhaul: 50" (1.27m) yellow/white	
	Vang: 60" (1.53m) blue/white	
3.	Cunningham: 32" (0.82m) red/white	
4.	(110111) 9.00111 11110	
	Clew: 12" (0.31m) black/white	
M.	Vang Cleat	
N.	Tiller Handle	
Ο.	Rudder (retractable aluminum blade)	
P.	Daggerboard 40" (1.0 m), aluminum	
Q.	Flotation Bag	#915000

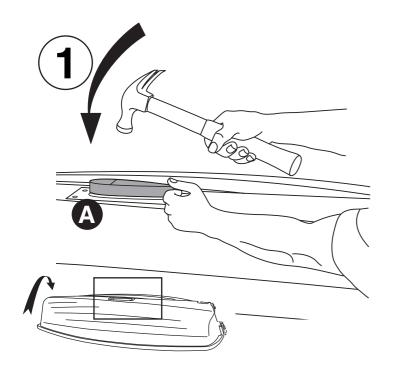


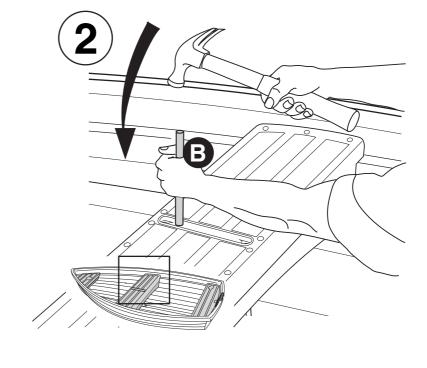


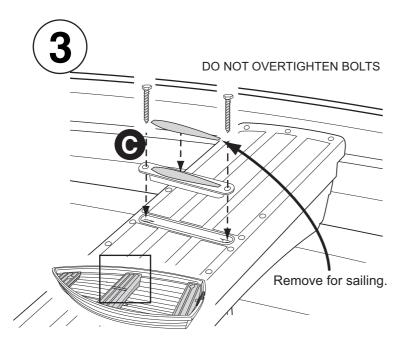


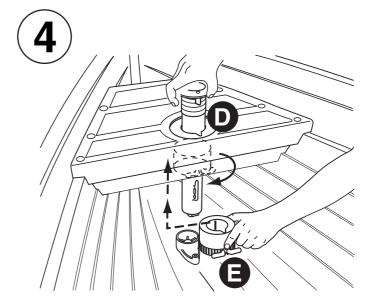


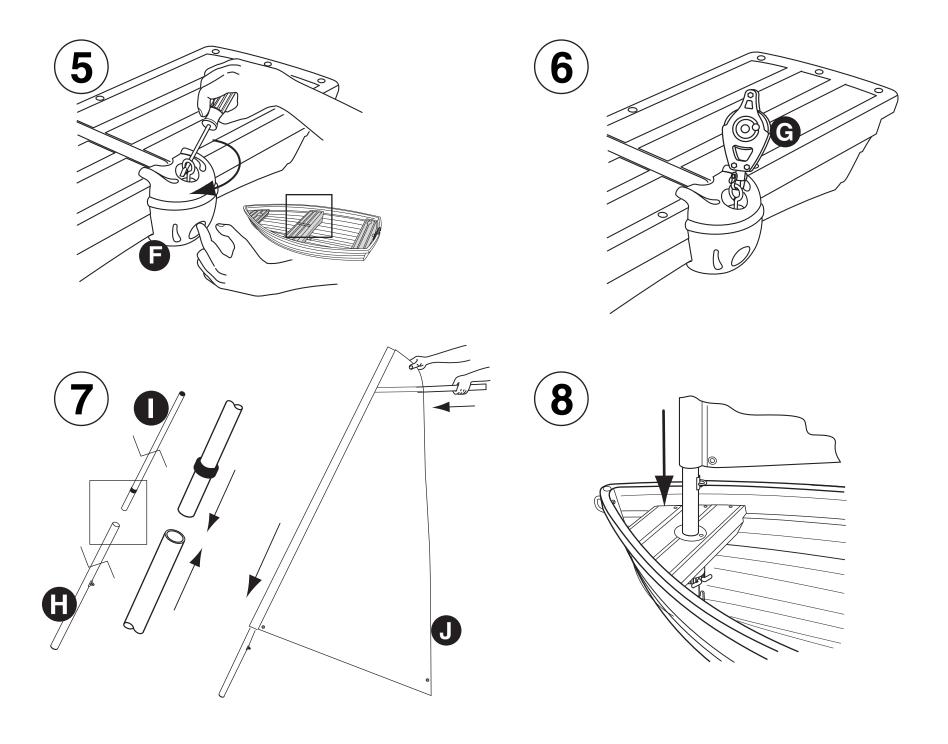

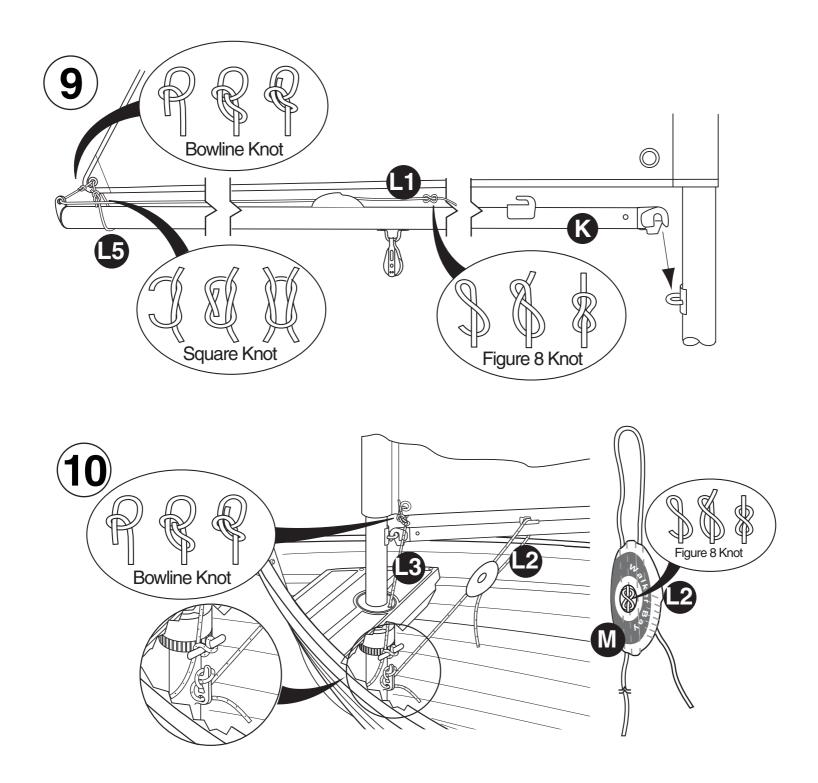

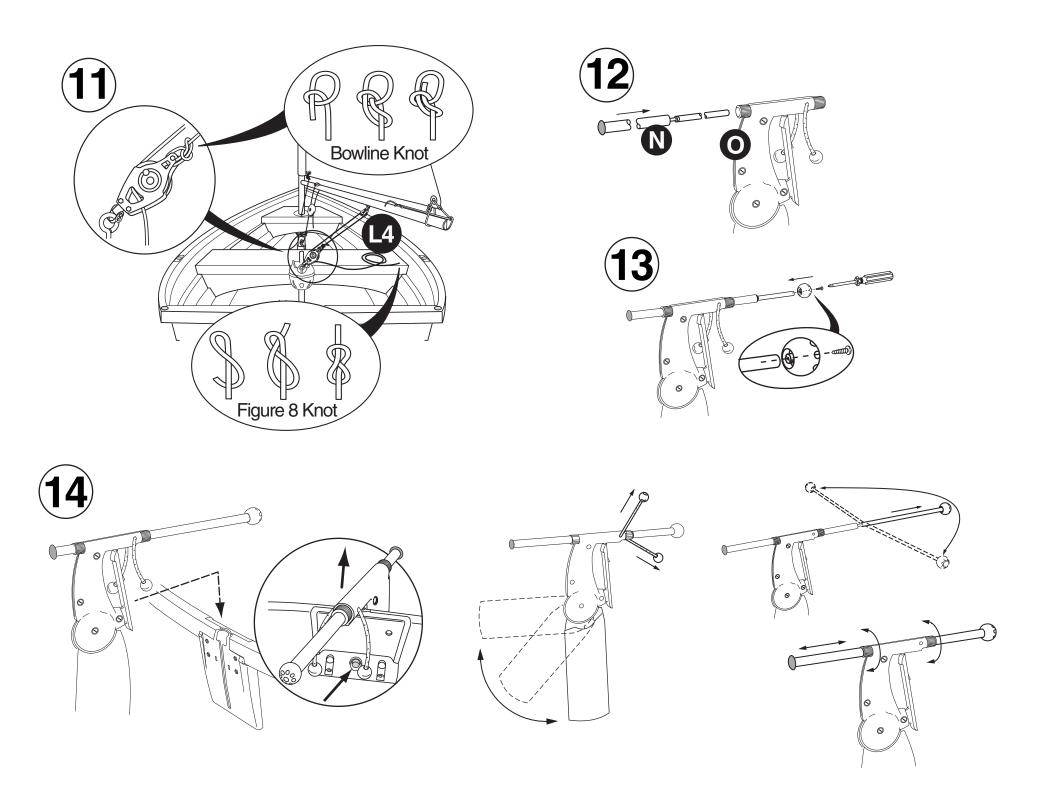

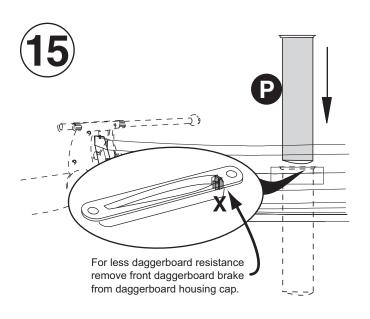

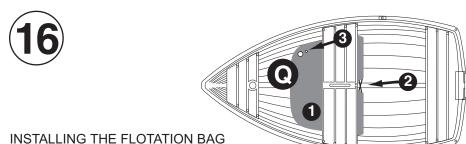

- 1. Insert bag under middle seat.
- 2. Secure ties around daggerboard well.
- 3. Inflate bag by blowing or pumping air into the smaller valve.


A WARNING


This flotation bag is not designed to replace a personal flotation device, clothing commensurate with the conditions, the practice of maintaining products in good working order, the "buddy system" (a rescue boat), or common sense.

The flotation bag will displace water captured in the hull if your Walker Bay boat capsizes while sailing. The bag will reduce the amount of water that needs to be bailed out of the hull, making it easier to right the boat and sail away.

HOW TO ADJUST SAIL SIZE

(Performance Plus Sail Kit only)

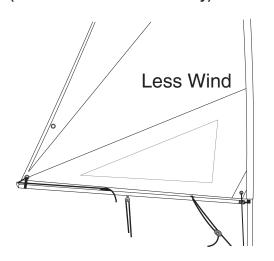

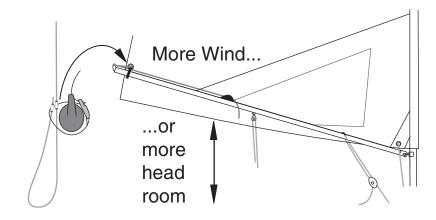

A WARNING


IMPORTANT SAFETY INFORMATION

- READ OWNERS MANUAL. IMPROPER USE MAY CAUSE INJURY OR DEATH.
- EACH PASSENGER MUST HAVE AN APPROVED PERSONAL FLOTATION DEVICE.
- CARRY AN OAR AND BAILER ON BOARD WHILE SAILING.
- USE A BUDDY SYSTEM, SAIL WHERE PEOPLE CAN SEE AND HELP YOU IF NECESSARY.
- DO NOT USE A MOTOR OR SAIL UNLESS YOU USE THE EQUIPMENT IN THE MANNER INTENDED AND/OR AS DESCRIBED IN THE MANUAL.
- DO NOT USE THIS BOAT UNDER THE INFLUENCE OF DRUGS OR ALCOHOL.
- DO NOT USE THIS BOAT IF YOU SUSPECT A CRACK OR A HOLE. IT MAY BE UNSAFE.
- USE CAUTION WHEN ENTERING OR EXITING THE BOAT.
- KEEP YOUR WEIGHT CENTERED AND DISTRIBUTE THE WEIGHT OF GEAR AND PASSENGERS EVENLY.
- DO NOT USE THIS BOAT AS A TOW CRAFT.
- THIS BOAT IS NOT A TOY. ADULT SUPERVISION ADVISED.
- PARTS AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.
- FOR SAFETY INFORMATION OR PARTS, CALL WALKER BAY BOATS AT: (888) 44-WALKER OR (604) 682-5699.

MAINTENANCE AND STORAGE

- After use, especially in salt water, rinse boat, sail, spars and rigging with fresh water.
- Do not use detergents or chemicals to clean sail.
- Roll sails and store inside sail bag.
- Do not store sails wet or damp.
- Avoid unnecessary prolonged exposure of sails to direct sunlight.
- Check rigging before each use, and service if necessary.

RIGHTING YOUR BOAT AFTER CAPSIZE

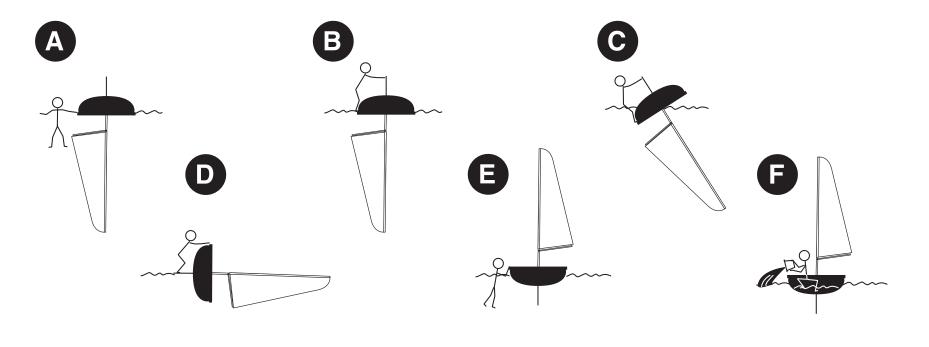

CORRECT SAILING POSITIONS

